




ANILAM ELECTRONICS CORP., 5625 N.W. 79th AVENUE, MIAMI, FLORIDA 33166  
(305) 592-2727 • TLX 26-4024


DIGITAL READOUTS — CNC CONTROLS — CAD/CAM SYSTEMS — MACHINE TOOLS —

## AUDIOTRONICS / DOTRONIX CRTS

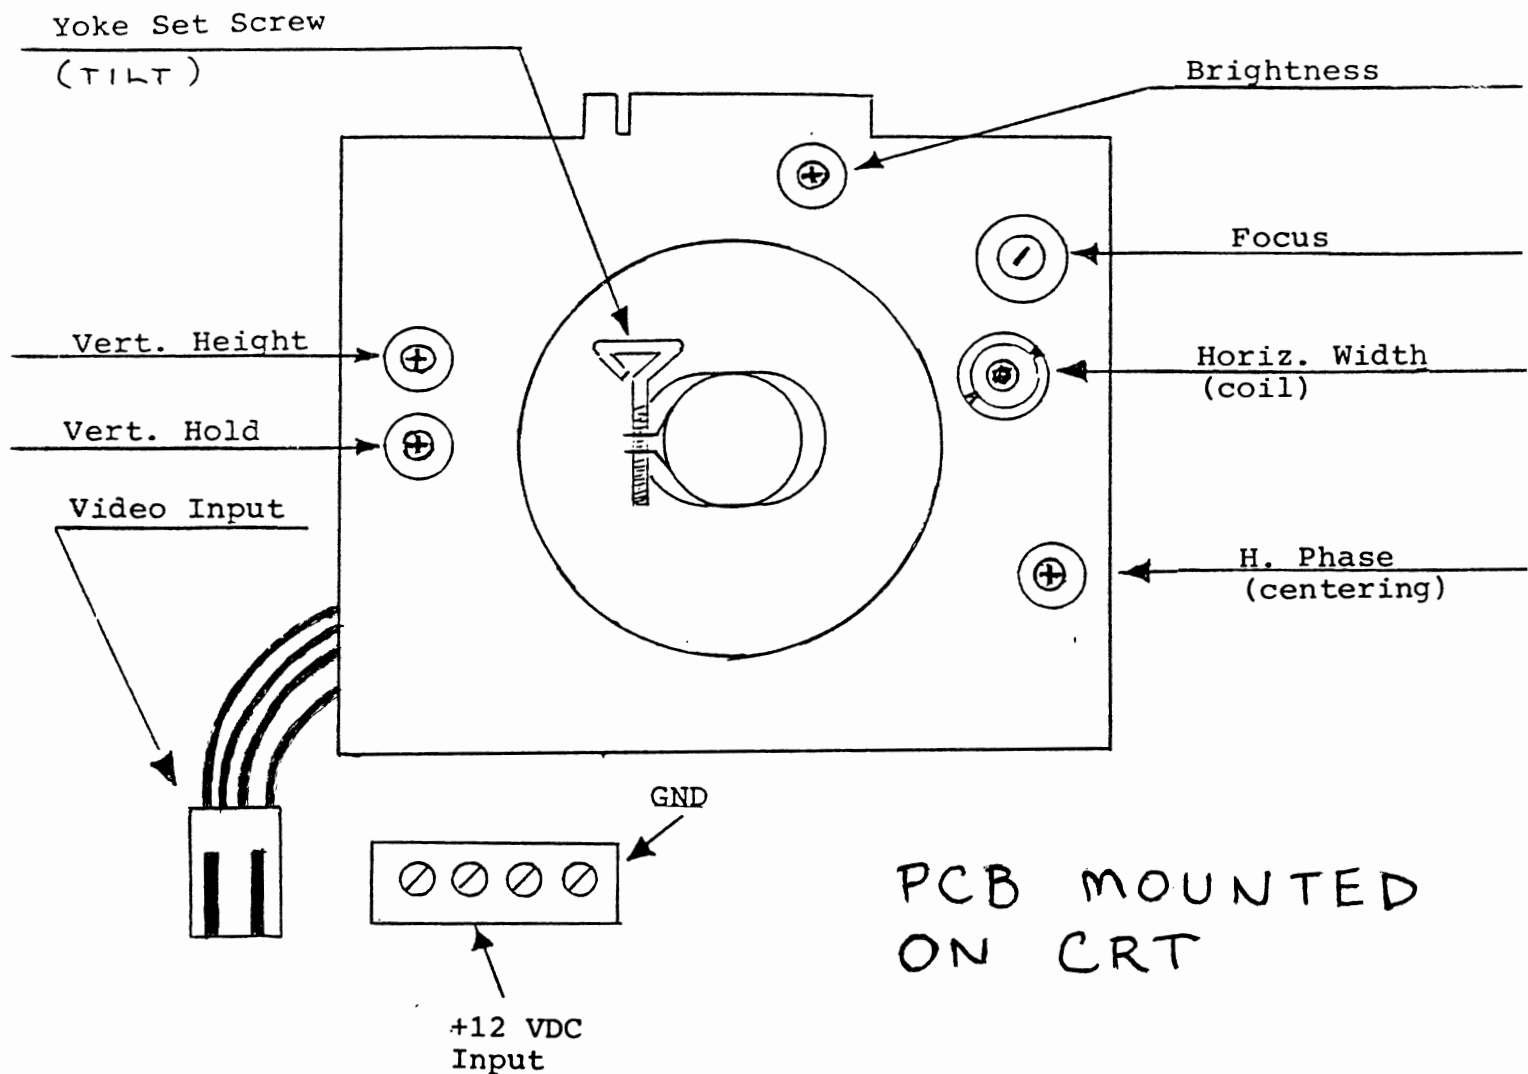

- |                               |   |   |
|-------------------------------|---|---|
| 1). Images fuzzy/not sharp    | - | Adjust focus for best overall sharpness.  |
| 2). Horizontal size incorrect | - | Adjust width coil slug for 6" horiz. width  |
| 3). Video not centered        | - | Adjust H.Phase until video is centered.   |
| 4). Picture rolls vertically  | - | Adjust vert. hold.  |
| 5). Vertical size incorrect   | - | Adjust vert. height control for 4 1/2" hgt  |
| 6). Picture appears tilted    | - | Loosen yoke set screw, rotate yoke to desired position, re-tighten yoke set screw |

NOTE: FOR CRTS SHIPPED AFTER 8.14.89, DOES NOT  
SUPERCEDE OLD ALIGNMENT GUIDE (FOR OLD  
CRTS)

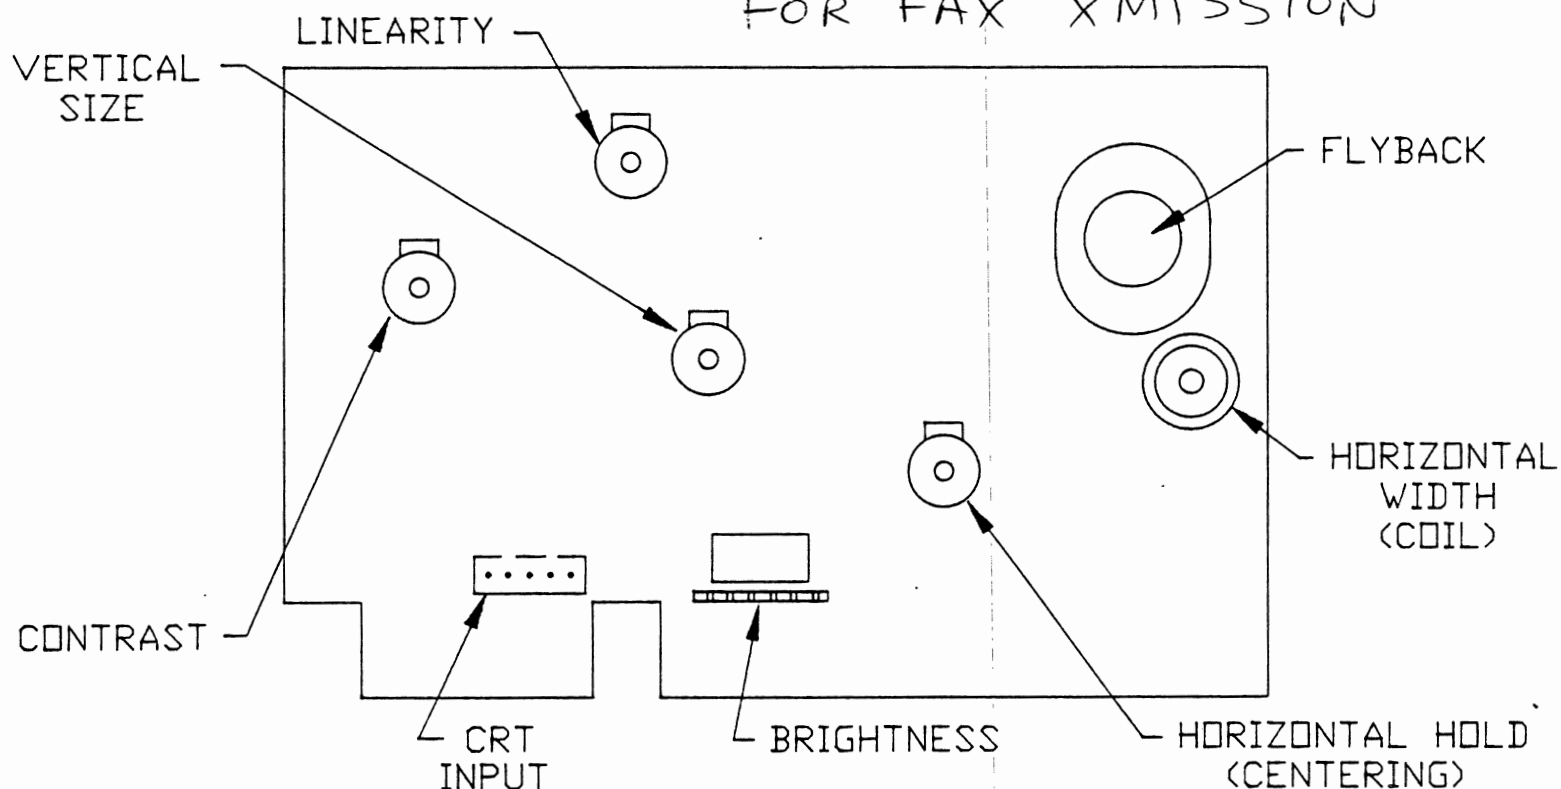


\* FOCUS ADJUSTMENT ON SMALL PCB  
ATTACHED TO TUBE.

ENTER DIAGNOSTIC PROGRAM AND ALIGN (ON BULLSEYE PATTERN):

- \_\_\_ a. CONTRAST POT DOWN UNTIL DISPLAY IS JUST VISIBLE.
- \_\_\_ b. BRIGHTNESS POT UP UNTIL BACKGROUND RASTER IS VISIBLE.
- \_\_\_ c. BRIGHTNESS POT BACK DOWN UNTIL BACKGROUND RASTER JUST DISAPPEARS.
- \_\_\_ d. CONTRAST POT UP TO DESIRED BRIGHTNESS.
- \_\_\_ e. FOCUS POT UNTIL PICTURE IS SHARP.
- \_\_\_ f. H SIZE POT UNTIL WIDTH IS 6 INCHES.
- \_\_\_ g. V SIZE POT UNTIL HEIGHT IS 4 1/2 INCHES.
- \_\_\_ h. H HOLD POT UNTIL DISPLAY IS CENTERED.
- \_\_\_ i. (ON SQUARES PATTERN) ADJUST LINEARITY POT UNTIL TOP & BOTTOM SQUARES ARE THE SAME HEIGHT.

# MOTHERBOARD

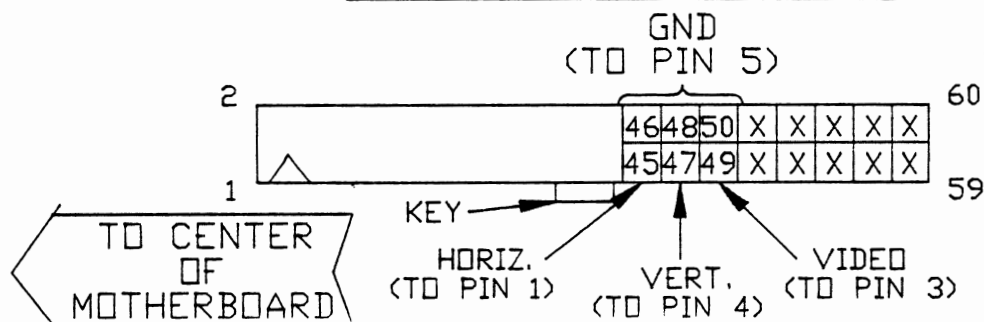

## C R T

