


## NEW COMPUTRON CRT ALIGNMENT GUIDE 8.3.89

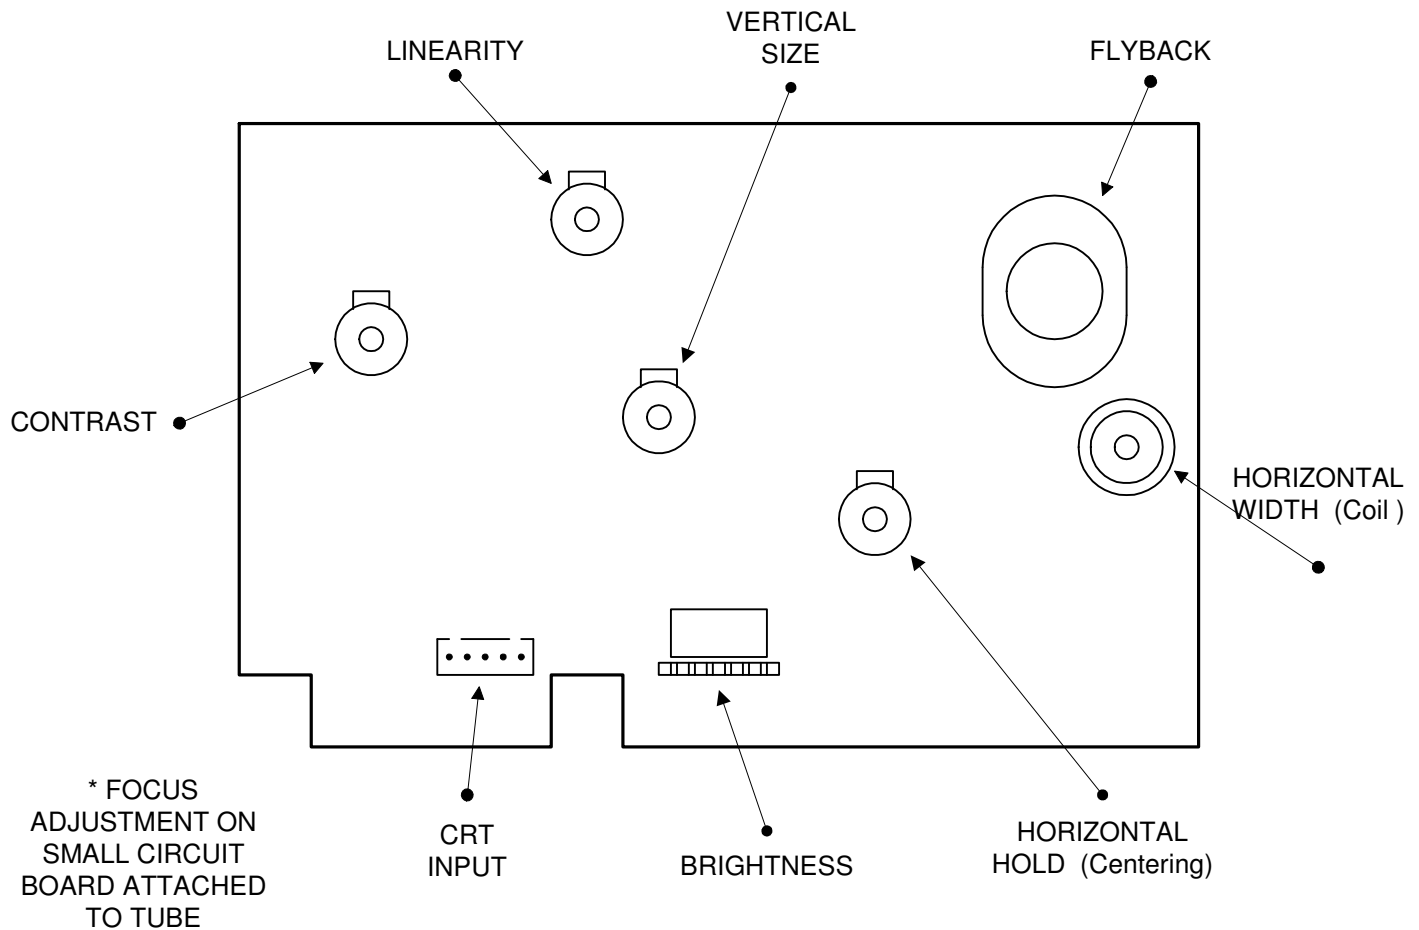


ENTER DIAGNOSTIC PROGRAM AND ALIGN (ON BULLSEYE PATTERN)


- \_\_\_ a. CONTRAST POT DOWN UNTIL DISPLAY IS JUST VISIBLE.
- \_\_\_ b. BRIGHTNESS POT UP UNTIL BACKGROUND RASTER IS VISIBLE.
- \_\_\_ c. BRIGHTNESS POT BACK DOWN UNTIL BACKGROUND RASTER JUST DISAPPEARS.
- \_\_\_ d. CONTRAST POT UP TO DESIRED BRIGHTNESS.
- \_\_\_ e. FOCUS POT UNTIL PICTURE IS SHARP.
- \_\_\_ f. HORIZONTAL WIDTH COIL UNTIL WIDTH IS 6 INCHES.
- \_\_\_ g. VERTICAL SIZE POT UNTIL HEIGHT IS 4 1/2 INCHES.
- \_\_\_ h. HORIZONTAL HOLD POT UNTIL DISPLAY IS CENTERED.
- \_\_\_ i. (ON SQUARES PATTERN:) ADJUST LINEARITY POT UNTIL TOP AND BOTTOM SQUARES ARE THE SAME HEIGHT.

### MOTHERBOARD WIRING

(\* "X" = Open Pin)

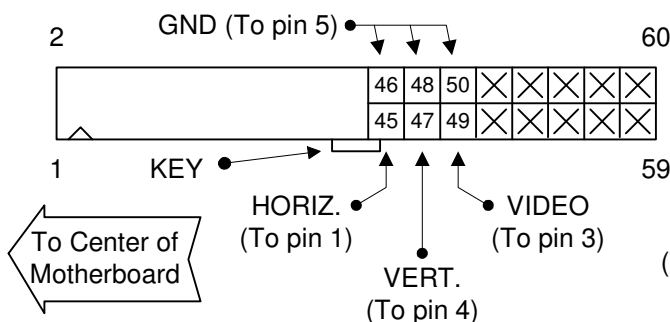

### CRT WIRING

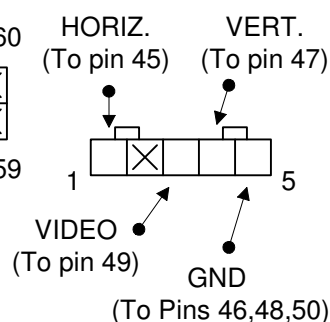

ANILAM INC.  
MIRAMAR, FLORIDA  
USA

**ANILAM**

#### DESCRIPTION

NEW COMPUTRON CRT ALIGNMENT GUIDE  
(For units shipped after 14 AUG 89. Does not  
supercede old alignment guide for old CRTs)

DRAWN BY  
Kirk K. Steinhauser

DATE  
23 July 2001

DRAWING NO.  
KS1204BA

PAGE  
1 OF 1

REV.  
A